


COLOMBI Mini - Manual Spring Separator

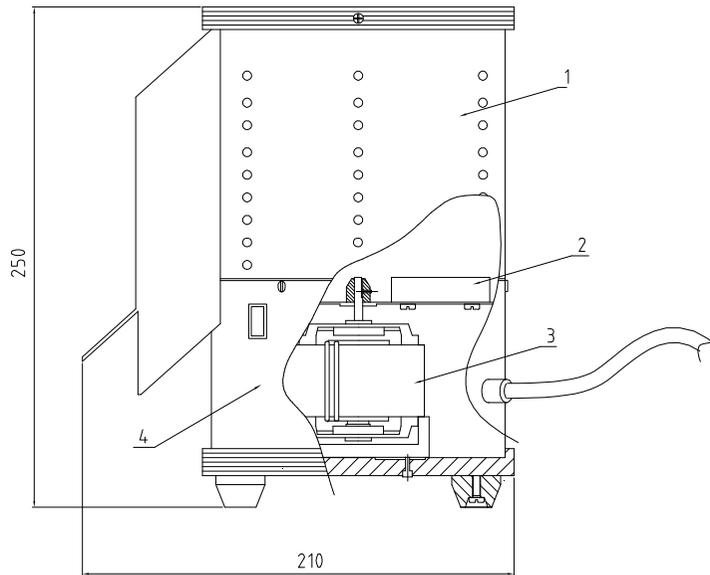

1) Upper Cylinder, 2) Wing
3) Motor, 4) Lower Cylinder

INSTRUCTIONS FOR USE

The tangled springs are placed in the container. The rotating plate and the wings put the springs in motion and the untangled springs come out the nozzle.

Any springs still tangled are once again put into the container.

Note that the capacity for different kinds of springs may vary. The separator should always be running when the springs are placed in the container. Always begin separation with a small amount of springs. This is particularly important for springs of fine wire or springs with hooks or loops.